


SKYLINE DESIGN INSTALLATION GUIDE

GLASSBOARDS WITH EDGE-GRIP

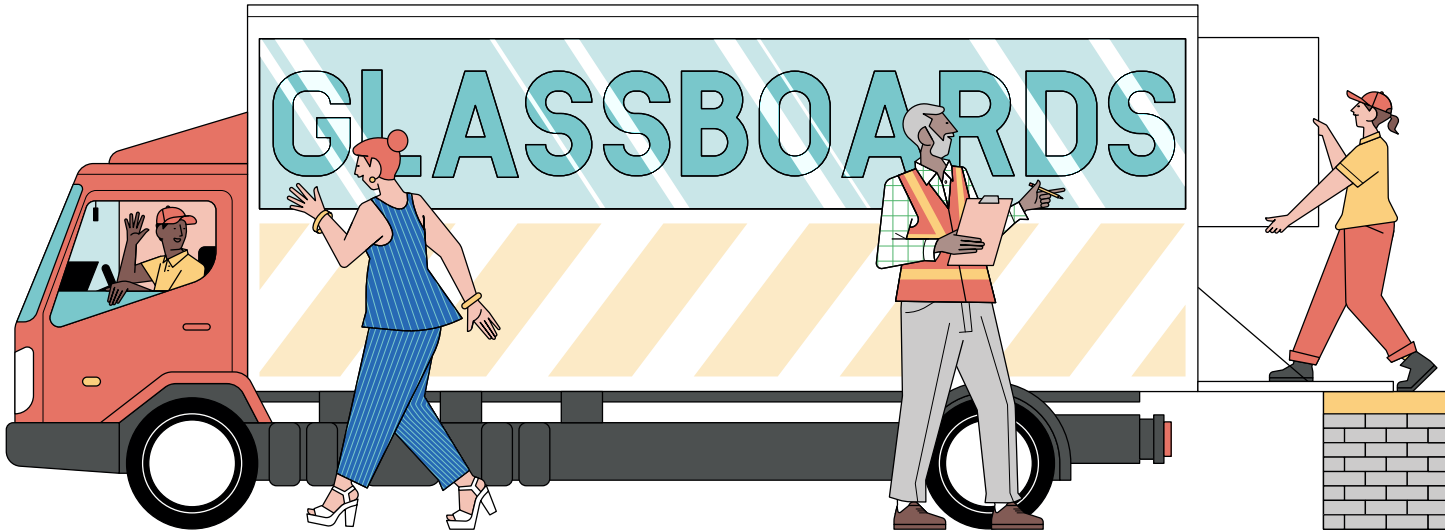

READ BEFORE BEGINNING.

These installation recommendations assume that the glassboard is installed on 5/8" thick drywall in new condition. It is the sole responsibility of the installer to verify that the wall structure and substrate are suitable for the installation method and that the product is installed properly and safely.



PARTS INCLUDED

- Glassboard
- Mounting template
- Edge Grips
- Toggle Wall Anchors
- 1/4-20 x 2.5" Button Head Screws
- Set Screws
- 3/32" Allen Wrench
- 5/32" Allen Wrench
- Cork Pads

REQUIRED

- Drill
- Level
- 1/8" & 1/2" Diameter Drill Bits

SKYLINE DESIGN INSTALLATION GUIDE

GLASSBOARDS WITH EDGE-GRIP

1 Using a level and the included template, mark the location of glassboard. The engraved rectangle on the template denotes the outer perimeter of the glassboard. Centerline marks are provided for convenience.

2 Align the template with the layout marks from step 1, and drill a 1/8" pilot hole at each hole location in the template.

Installing to hollow wall?



Continue to Step 3.

Anchoring to studs or solid blocking?



Skip to Step 8.


3 Drill a 1/2" diameter hole at each pilot hole location.

4 Holding the anchor, insert the metal toggle into the hole.

5 Align the ends of the plastic straps and pull to seat the metal toggle against the drywall. Slide the plastic cap snug to the wall surface, ensuring that the notch on the side of the cap is horizontal.

6 Snap the plastic straps off

7 Attach an edge grip housing at each mounting location. For hollow wall installations use the included 1/4-20 x 1.5" button head screws and toggle anchors.

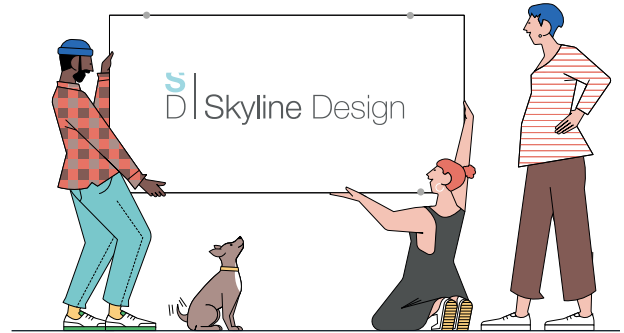

8 To attach to studs or solid blocking use an appropriately sized wood screw. Tighten edge grip housing securely in place. Ensure that the set screw hole faces up for the top mounting locations and down for the bottom locations.

9 Place a cork pad on each of the lower edge grip inserts.

10 Slide the lower edge grips into the lower housings. Install a set screw in each lower housing and tighten in place, leaving approximately 3/8" clearance.

11 Using 2 people, lift glassboard into place and set gently on the lower edge grips.

12 While holding the panel in place, place an edge grip insert over the glass at each top mounting location and slide into the edge grip housings. Secure each insert in place with a set screw.

13 Working on a single mounting location at a time: loosen the set screw, press in firmly on the edge grip insert, and tighten the set screw securely.

For questions, and to purchase markers & accessories: glassboards@skydesign.com

Skyline Design offers a limited lifetime warranty on glassboards against manufacturer defect or workmanship. See Terms and Conditions for full warranty. Final installation is not the responsibility of Skyline Design.

